




21.1 Ersatzteilbestellung / spare parts order


HINWEIS



- über unsere Homepage – Kategorie SERVICE – ERSATZTEILANFORDERUNG,
- per Mail an service@holzmann-maschinen.at.

(EN) With original HOLZMANN spare parts you use parts that are attuned to each other shorten the installation time and elongate your products lifespan.

NOTE




- via our Homepage – category SERVICE - SPARE PARTS REQUEST,
- by e-mail to service@holzmann-maschinen.at.

HOLZMANN MASCHINEN GmbH www.holzmann-maschinen.at








21.2 Explosionszeichnung / Exploded view

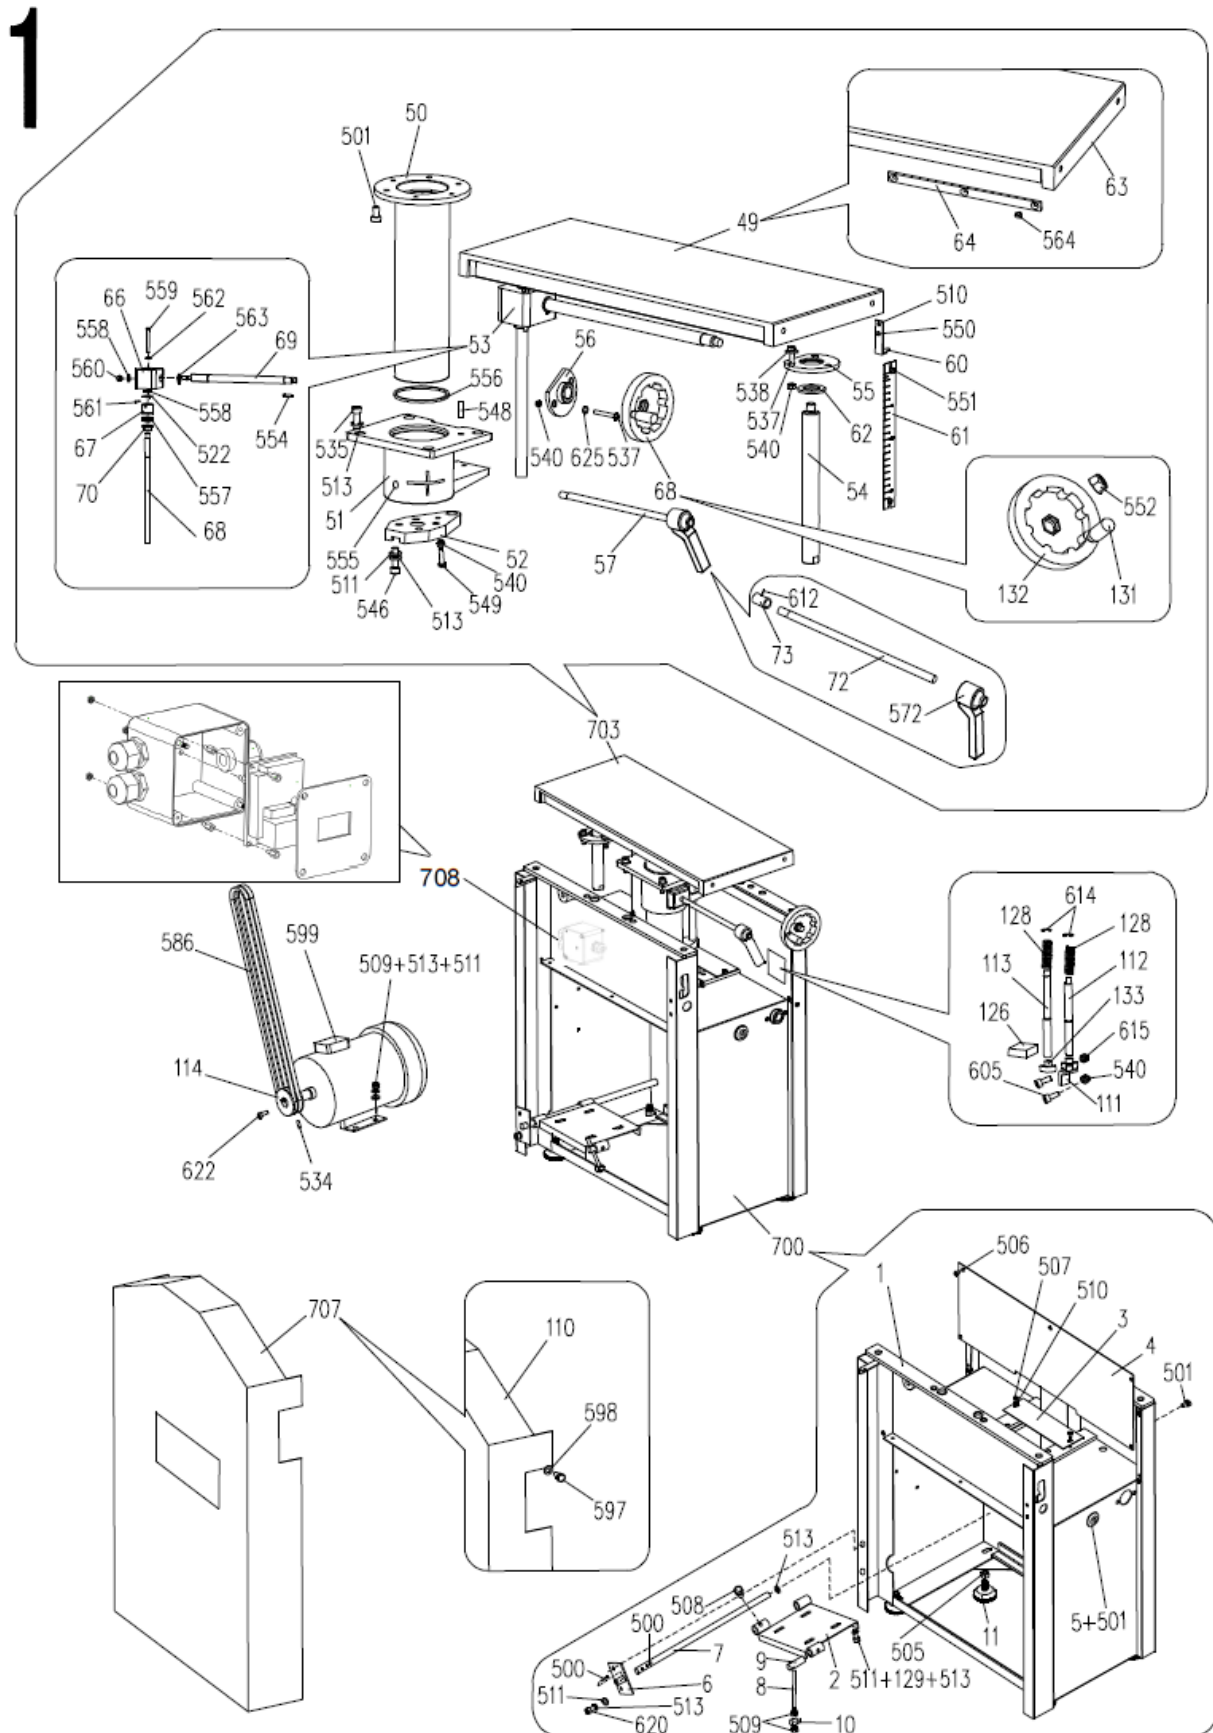




2

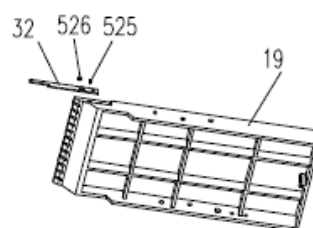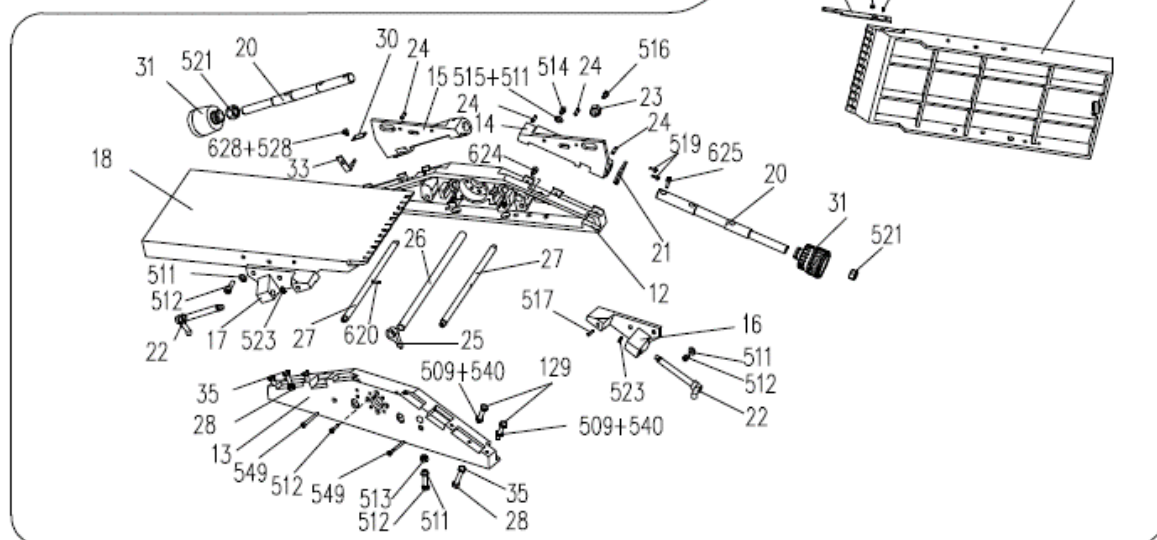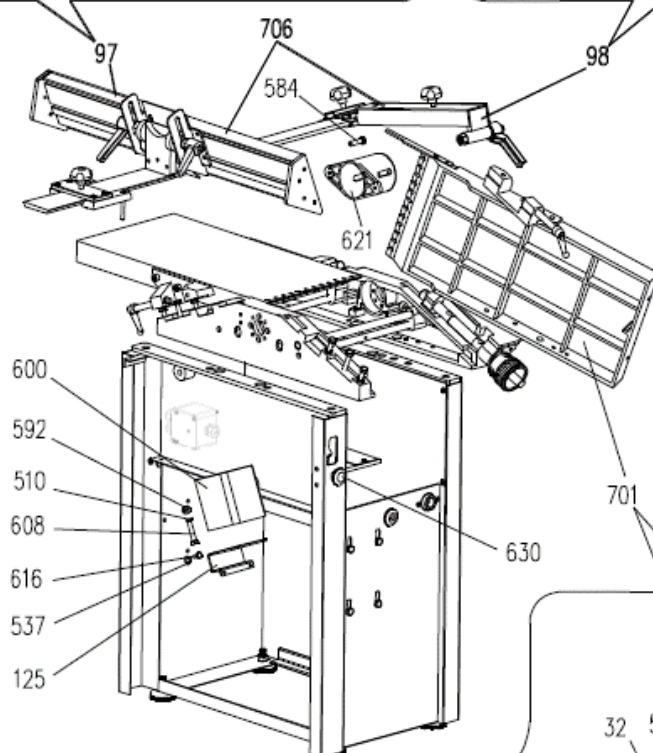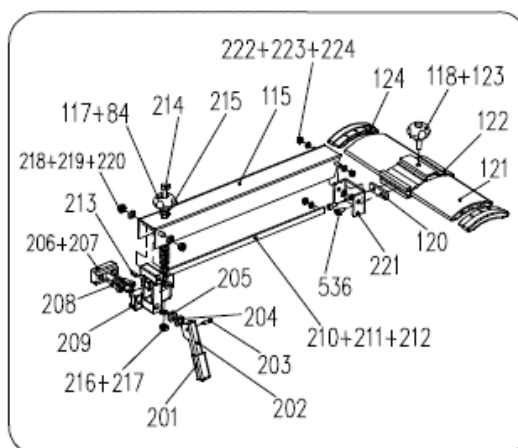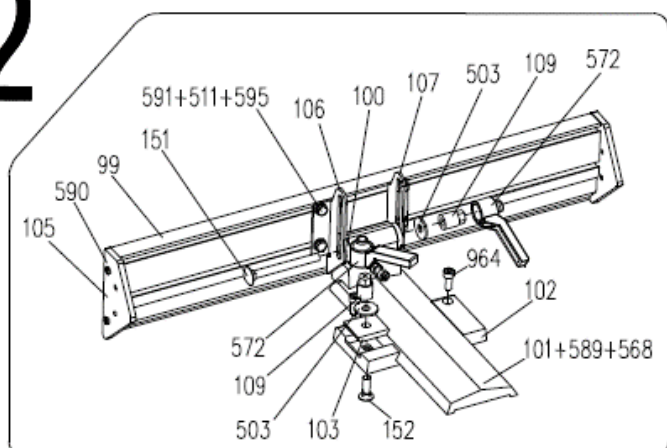




3

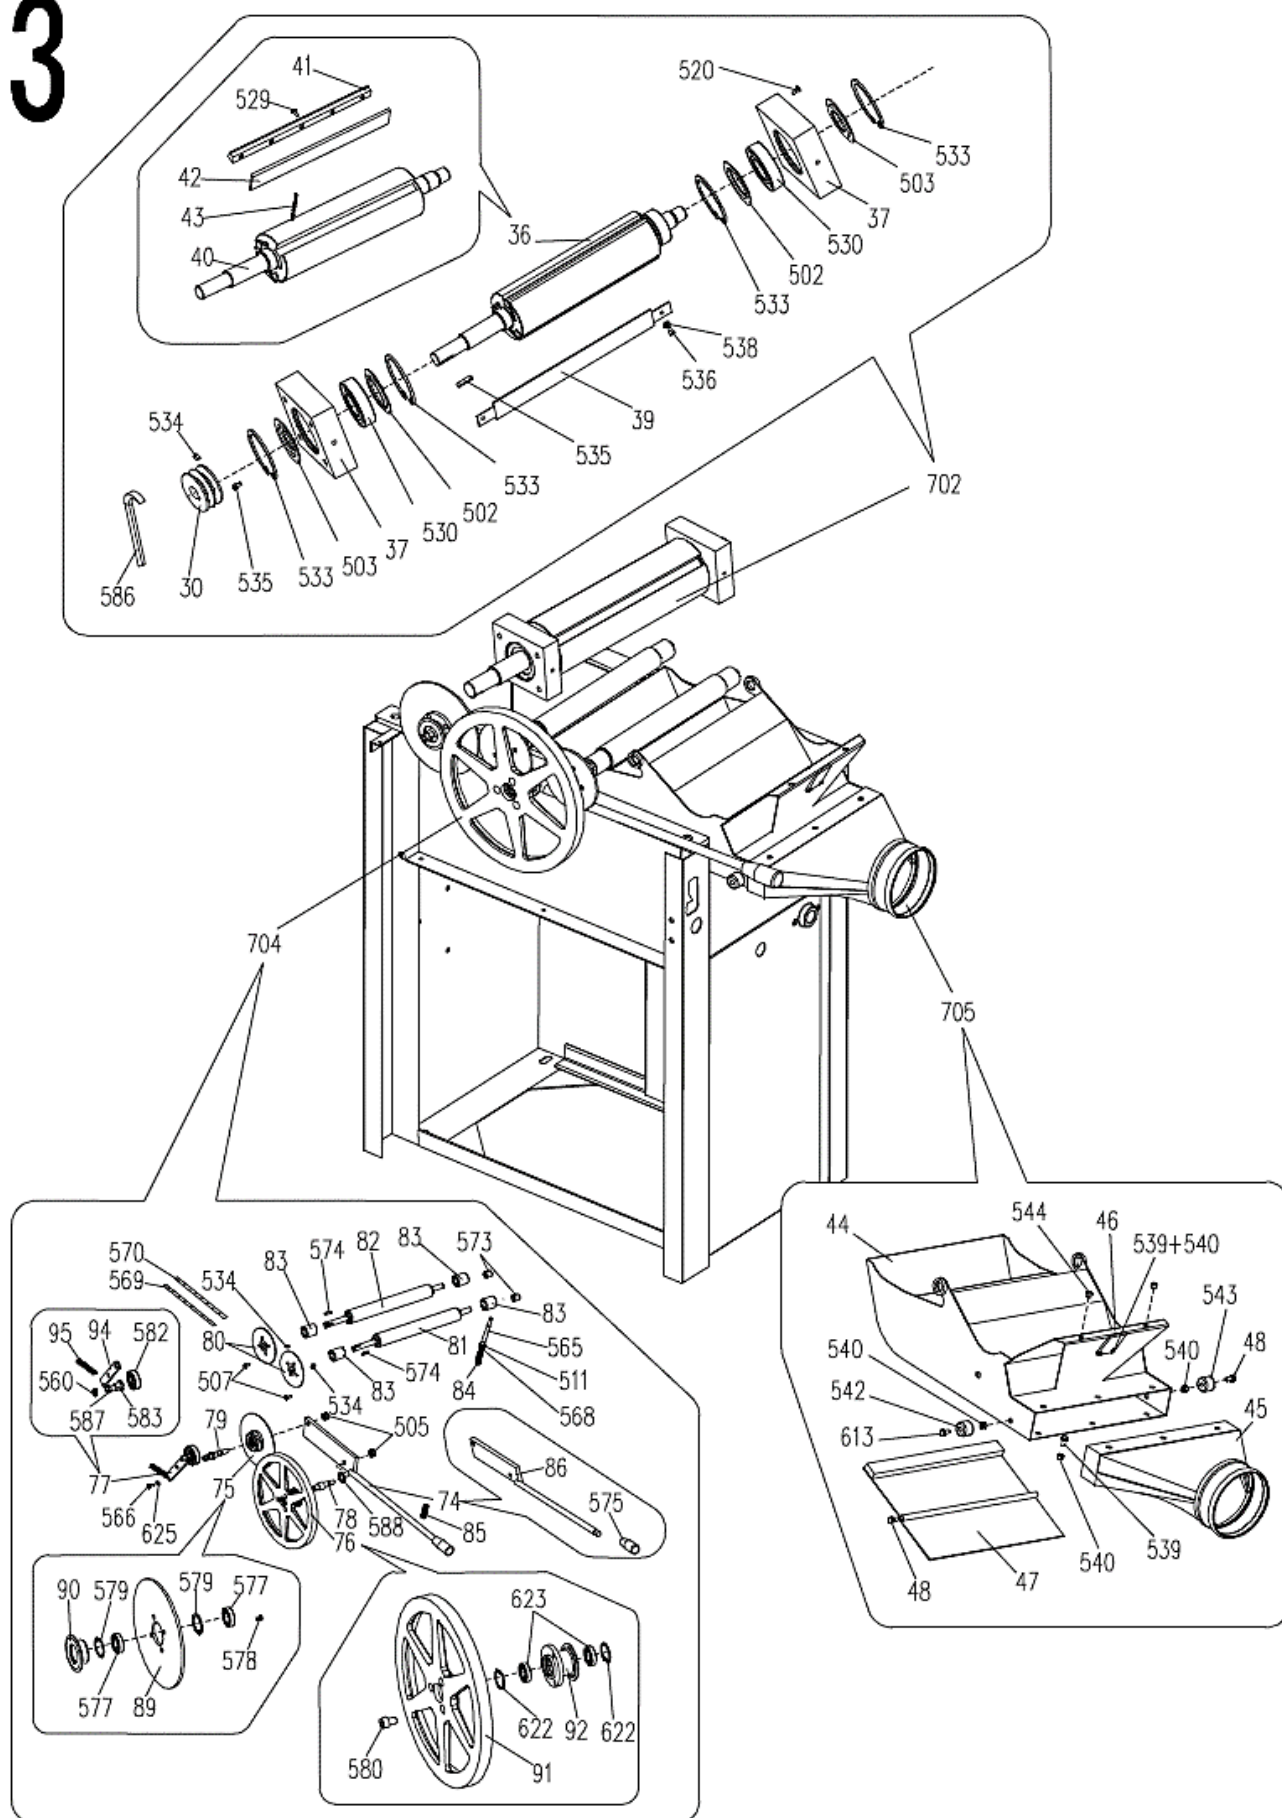



OPTIONAL:

4

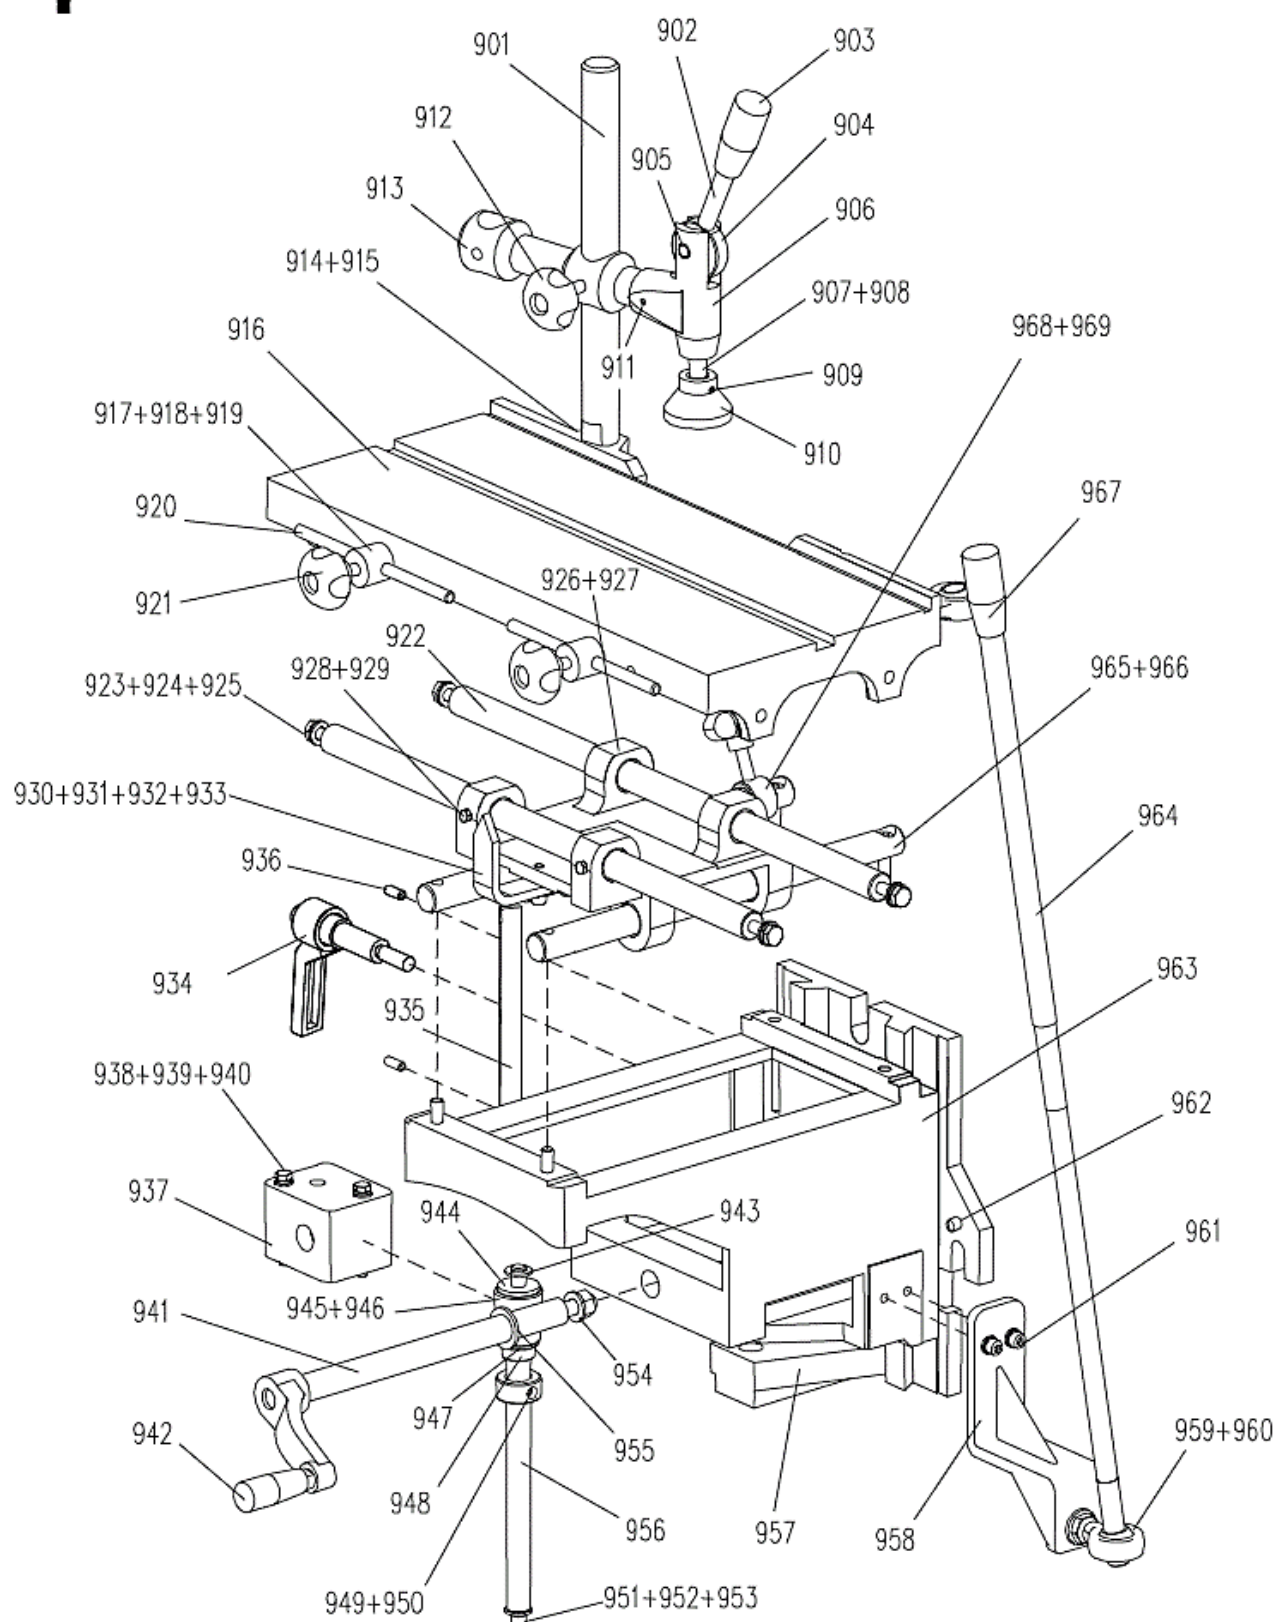



No.	Description	Qty	No.	Description	Qty
1	Base stand	1	212	Nut M6	1
2	Motor base	1	213	Pin A6x20	1
3	Small cover plate	2	214	Adjusting bolt	1
4	Right cover plate	1	215	Washer	8
5	Support sleeve	1	216	Hex nut M8	3
6	Fixed plate	1	217	Washer 8	1
7	Axle	1	218	M8 thread shaft	1
8	Screw	1	219	Hex nut M8	2
9	Bush	1	220	Washer	8
10	Adjusting screw	1	221	Adjusting plate	1
11	Support base	4	222	M6 thread shaft	1
12	Right cutter block support	1	500	Pin 3.2x30	1
13	Left cutter block support	1	501	Socket hex cap screw M10X16	1
14	Front adjusting block	1	502	Dustproof cover (big)	2
15	Back adjusting block	1	503	Dustproof cover(small)	2
16	Front locking block	1	504	Spring washer 6	2
17	Back locking block	1	505	Nut M10	12
18	In-feed table	1	506	Flat cap screw M5x8	5
19	Out-feed table	1	507	HP screw M5X8	4
20	Adjusting axle	2	508	Hex cap bolt M8X16	7
21	Apron	2	509	Nut M8	15
22	Locking handle assembly	2	510	Washer 5	12
23	Eccentric bush	2	511	Washer 8	26
24	Screw M10x8	2	512	Socket hex cap screw M8X25	4
25	Kick block	15	513	Spring washer 8	19
26	Turning axle	1	514	Socket hex cap screw M10x30	4
27	Support axle	2	515	Spring washer 10	2
28	Nut M12	3	516	Socket hex cap screw M10x40	3
30	Feed scale	1	517	Pin A6X40	2
31	Adjusting wheel	2	518	Socket hex cap screw M6x16	4
32	Locating plate	1	519	Hex cap screw M8X16	2
33	Feed pointer	1	520	Screw M6x16	4
35	Hex bolt M12x55	2	521	Nut M16	4
36	Cutter block assembly	1	522	Large washer 10	6
37	Ball bearing base assembly	2	523	External retaining ring 15	2
38	Driven pulley	1	525	Elastic pin 6x16	1
39	Protective plate	1	526	Socket hex cap screw M6X14	1



40	Cutter block	1	528	Ph screw M4X6	2
41	Blade locking block	4	529	Screw M6X10	20
42	Blade 310x30x3	4	530	Ball bearing 2206	2
43	Compression spring	8	531	Pin 8x16	1
44	Dust chute	1	532	External retaining ring 30	1
45	Dust chute head	1	534	Screw M6X10	4
46	Locking plate	1	535	Socket hex cap screw M8x20	8
47	Change-over plate	1	536	Hex cap screw M6X10	2
48	Nut M6X12	2	537	Hex cap screw M6X20	12
49	Thickneser table assembly	1	538	Washer 6	4
50	Lifting tube	1	539	Hex cap screw M6X10	9
51	Oriented body	1	540	Nut M6	18
52	Splint	1	542	Support rubber cylinder	1
53	Gear case assembly	1	543	Support rubber cylinder	1
54	Mandril	1	544	Pad	2
55	Block	1	545	Socket hex cap screw M10X16	7
56	Block	1	546	Socket hex cap screw M8X35	4
57	Locking bar assembly	1	547	Screw M10X8	3
58	Wheel assembly	1	548	Screw M8X16	4
59	Ring	1	549	Socket hex cap bolt M6X16	1
60	Pointer	1	550	PH screw M5x8	2
61	Depth scale	1	551	PH screw M4X6	2
62	Washer	1	552	Special nut M12	1
63	Thickneser table	1	553	Nut M6	4
64	Apron	4	554	Pin 5X12	1
66	Gear box	1	555	Straight-through oiling cup M10	1
67	Helical gear	1	556	Seal	1
68	Guide screw	1	557	Thrust bearing 51102	1
69	Gear axle	1	558	Washer 10	2
70	Bush	1	559	Hex head screw M6X65	2
72	Double head screw	1	560	Self-locking nut M10	2
73	Locating bush	1	561	Elastic pin 4x25	1
74	Control handle assembly	1	562	External retaining ring 10	1
75	Chain wheel assembly	1	563	External retaining ring 18	1
76	Chain wheel assembly	1	564	Flat head screw M5X6	12
77	Tensioner assembly	1	565	Double head screw	4
78	Pin	1	566	Hex cap bolt M6X10	1
79	Chain wheel axle	1	568	Nut M8	4



80	Chain wheel IV	2	569	Chain 05B-1x106	1
81	Driving roller	1	570	Chain 05B-1X90	1
82	Pressing rolle	1	571	Locking handle assembly	2
83	Bush	4	572	Big handle assembly	1
84	Spring	4	573	Bush	8
85	Spring	1	574	Pin 5X16	2
86	Connecting plate	1	575	Handle	1
89	Chain wheel I	1	577	Bearing 61901-2Z	4
90	Chain wheel II	1	578	PH screw M6X10	4
91	Cast iron friction wheel	1	579	Internal retaining ring 24	4
92	Chain wheel III	1	580	Flat head screw M6x16	4
94	Tension plate	1	582	Bearing 6303-2Z	1
95	Spring	1	583	Pin	1
97	Guiding fence	1	584	Flat cap screw M6X16	1
98	Cutter block protective fence	1	586	V-Belt(L-1500)	2
99	Fence plate	1	587	Washer 10	1
100	Special washer	2	588	Socket hex cap screw M6X12	11
101	Guiding plate	1	589	Socket hex cap screw M5X50	6
102	Fixing base	1	590	Self-setting screw ST5X40	1
103	Pressing board	1	591	Nut M8	4
105	Protective plate	2	592	Nut M5	7
106	Left sliding block	1	595	Hex cap bolt M8X16	4
107	Right sliding block	1	596	Socket hex cap screw M6X12	2
109	Locking bush	2	597	PH screw M5x8	2
110	Protective cover	1	598	Washer 5	2
111	Sensitive switch plate	1	599	Motor	1
112	Short locating bar	1	600	Switch	1
113	Long locating bar	1	601	Socket hex cap bolt M5X16	2
114	Motor pulley	1	602	Washer 5	2
115	Supporting stand	1	603	Flat head screw M8X16	2
116	Locking pole	1	605	Hex cap bolt M8X25	4
117	Locking handle	1	606	Socket hex cap screw M6X40	1
118	Handle	1	608	PH screw M5X50	2
120	Fixed plate	1	612	Spring pin 4X14	1
121	Protective plate	1	613	Hex cap bolt M6X16	2
122	Protective plate cover	1	614	Clip 6	2
123	Locking plate	1	615	Special nut M6	1
124	Plastic insert	1	616	Socket hex cap screw M5X12	2



125	Switch mounting plate	1	617	Nut M12	1
126	White sensitive switch	1	619	Large handle assembly	1
128	Spring	2	620	Hex cap bolt M8X20	2
129	Screw M8X25	8	621	Protective cover	1
131	Handle	1	622	Socket hex cap screw M6X16	1
132	Handle wheel	1	623	Socket hex cap screw M10X30	1
151	Bolt M10x100	1	624	Spring pin 5X10	1
152	Bolt M10x30	1	625	Large washer 6	3
201	Rubber bush	1	630	Emergency switch	1
202	Locking handle	1	700	Base assembly	1
203	Spring pin 5x20	1	701	Planing table assembly	1
204	Spring washer 10	1	702	Cutter block assembly	1
205	Washer	10	703	Thicknessing table assembly	1
206	Fixing block	1	704	Chain wheel assembly	1
207	Spring	1	705	Dust chute assembly	1
208	Hex screw M6x20	2	706	Fence and cutter protective assy	1
209	Truning block	1	707	Protective cover assembly	1
210	Connecting assy	1	708	Box for brake circuit board	1
211	Washer	6			

22 ZUBEHÖR / ACCESSORIES

((DE)) Optionales Zubehör finden Sie online auf der Produktseite, Kategorie EMPFOHLENES ZUBEHÖR ZUM PRODUKT.

((EN)) Optional accessories can be found online on the product page, category RECOMMENDED PRODUCT ACCESSORIES.



25 GARANTIEERKLÄRUNG (DE)

1.) Gewährleistung

HOLZMANN MASCHINEN GmbH gewährt für elektrische und mechanische Bauteile eine Gewährleistungsfrist von 2 Jahren für den nicht gewerblichen Einsatz;

bei gewerblichem Einsatz besteht eine Gewährleistung von 1 Jahr, beginnend ab dem Erwerb des Endverbrauchers/Käufers. HOLZMANN MASCHINEN GmbH weist ausdrücklich darauf hin, dass nicht alle Artikel des Sortiments für den gewerblichen Einsatz bestimmt sind. Treten innerhalb der oben genannten Fristen/Mängel auf, welche nicht auf im Punkt „Bestimmungen“ angeführten Ausschlussdetails beruhen, so wird HOLZMANN MASCHINEN GmbH nach eigenem Ermessen das Gerät reparieren oder ersetzen.

2.) Meldung

Der Händler meldet schriftlich den aufgetretenen Mangel am Gerät an HOLZMANN MASCHINEN GmbH. Bei berechtigtem Gewährleistungsanspruch wird das Gerät beim Händler von HOLZMANN MASCHINEN GmbH abgeholt oder vom Händler an HOLZMANN MASCHINEN GmbH gesandt. Retoursendungen ohne vorheriger Abstimmung mit HOLZMANN MASCHINEN GmbH werden nicht akzeptiert und können nicht angenommen werden. Jede Retoursendung muss mit einer von HOLZMANN MASCHINEN GmbH übermittelten RMA-Nummer versehen werden, da ansonsten eine Warenannahme und Reklamations- und Retourbearbeitung durch HOLZMANN MASCHINEN GmbH nicht möglich ist.

3.) Bestimmungen

- a) Gewährleistungsansprüche werden nur akzeptiert, wenn zusammen mit dem Gerät eine Kopie der Originalrechnung oder des Kassenbeleges vom Holzmann Handelspartner beigelegt ist. Es erlischt der Anspruch auf Gewährleistung, wenn das Gerät nicht komplett mit allen Zubehörteilen zur Abholung gemeldet wird.
- b) Die Gewährleistung schließt eine kostenlose Überprüfung, Wartung, Inspektion oder Servicearbeiten am Gerät aus. Defekte aufgrund einer unsachgemäßen Benutzung durch den Endanwender oder dessen Händler werden ebenfalls nicht als Gewährleistungsanspruch akzeptiert.
- c) Ausgeschlossen sind Defekte an Verschleißteilen wie z. B. Kohlebürsten, Fangsäcke, Messer, Walzen, Schneideplatten, Schneideeinrichtungen, Führungen, Kupplungen, Dichtungen, Laufräder, Sageblätter, Hydrauliköle, Ölfiltern, Gleitbacken, Schalter, Riemen, usw.
- d) Ausgeschlossen sind Schäden an den Geräten, welche durch unsachgemäße Verwendung, durch Fehlgebrauch des Gerätes (nicht seinem normalen Verwendungszweckes entsprechend) oder durch Nichtbeachtung der Betriebs- und Wartungsanleitungen, oder höhere Gewalt, durch unsachgemäße Reparaturen oder technische Änderungen durch nicht autorisierte Werkstätten oder den Geschäftspartnern selbst, durch die Verwendung von nicht originalen HOLZMANN Ersatz- oder Zubehörteilen, verursacht sind.
- e) Entstandene Kosten (Frachtkosten) und Aufwendungen (Prüfkosten) bei nichtberechtigten Gewährleistungsansprüchen werden nach Überprüfung unseres Fachpersonals dem Geschäftspartnern oder Händler in Rechnung gestellt.
- f) Geräte außerhalb der Gewährleistungsfrist: Reparatur erfolgt nur nach Vorauskasse oder Händlerrechnung gemäß des Kostenvoranschlages (inklusive Frachtkosten) der HOLZMANN MASCHINEN GmbH.
- g) Gewährleistungsansprüche werden nur für den Geschäftspartnern eines HOLZMANN Händlers, welcher das Gerät direkt bei der HOLZMANN MASCHINEN GmbH erworben hat, gewährt. Diese Ansprüche sind bei mehrfacher Veräußerung des Gerätes nicht übertragbar

4.) Schadensersatzansprüche und sonstige Haftungen

Die HOLZMANN MASCHINEN GmbH haftet in allen Fällen nur beschränkt auf den Warenwert des Gerätes. Schadensersatzansprüche aufgrund schlechter Leistung, Mängel, sowie Folgeschäden oder Verdienstaufälle wegen eines Defektes während der Gewährleistungsfrist werden nicht anerkannt. HOLZMANN MASCHINEN GmbH besteht auf das gesetzliche Nachbesserungsrecht eines Gerätes.

SERVICE

Nach Ablauf der Garantiezeit können Instandsetzungs- und Reparaturarbeiten von entsprechend geeigneten Fachfirmen durchgeführt werden. Es steht Ihnen auch die HOLZMANN MASCHINEN GmbH weiterhin gerne mit Service und Reparatur zur Seite. Stellen Sie in diesem Fall eine unverbindliche Kostenanfrage

- per Mail an service@holzmann-maschinen.at.
- oder nutzen Sie das Online Reklamations- bzw. Ersatzteilbestellformular, zur Verfügung gestellt auf unserer Homepage – Kategorie SERVICE.



26 **GUARANTEE TERMS (EN)**

1.) Warranty

For mechanical and electrical components Company HOLZMANN MASCHINEN GmbH grants a warranty period of 2 years for DIY use and a warranty period of 1 year for professional/industrial use - starting with the purchase of the final consumer (invoice date).

In case of defects during this period which are not excluded by paragraph 3, Holzmann will repair or replace the machine at its own discretion.

2.) Report

In order to check the legitimacy of warranty claims, the final consumer must contact his dealer. The dealer has to report in written form the occurred defect to HOLZMANN MASCHINEN GmbH. If the warranty claim is legitimate, HOLZMANN MASCHINEN GmbH will pick up the defective machine from the dealer. Return shipments by dealers which have not been coordinated with HOLZMANN MASCHINEN GmbH will not be accepted. A RMA number is an absolute must-have for us - we won't accept returned goods without an RMA number!

3.) Regulations

- a) Warranty claims will only be accepted when a copy of the original invoice or cash voucher from the trading partner of HOLZMANN MASCHINEN GmbH is enclosed to the machine. The warranty claim expires if the accessories belonging to the machine are missing.
- b) The warranty does not include free checking, maintenance, inspection or service works on the machine. Defects due to incorrect usage through the final consumer or his dealer will not be accepted as warranty claims either.
- c) Excluded are defects on wearing parts such as carbon brushes, fangers, knives, rollers, cutting plates, cutting devices, guides, couplings, seals, impellers, blades, hydraulic oils, oil filters, sliding jaws, switches, belts, etc.
- d) Also excluded are damages on the machine caused by incorrect or inappropriate usage, if it was used for a purpose which the machine is not supposed to, ignoring the user manual, force majeure, repairs or technical manipulations by not authorized workshops or by the customer himself, usage of non-original Holzmann spare parts or accessories.
- e) After inspection by our qualified staff, resulted costs (like freight charges) and expenses for not legitimated warranty claims will be charged to the final customer or dealer.
- f) In case of defective machines outside the warranty period, we will only repair after advance payment or dealer's invoice according to the cost estimate (incl. freight costs) of HOLZMANN MASCHINEN GmbH.
- g) Warranty claims can only be granted for customers of an authorized HOLZMANN MASCHINEN GmbH dealer who directly purchased the machine from HOLZMANN MASCHINEN GmbH. These claims are not transferable in case of multiple sales of the machine.

4.) Claims for compensation and other liabilities

The liability of company HOLZMANN MASCHINEN GmbH is limited to the value of goods in all cases.

Claims for compensation because of poor performance, lacks, damages or loss of earnings due to defects during the warranty period will not be accepted.

HOLZMANN MASCHINEN GmbH insists on its right to subsequent improvement of the machine.

SERVICE

After Guarantee and warranty expiration specialist repair shops can perform maintenance and repair jobs. But we are still at your service as well with spare parts and/or product service. Place your spare part/repair service cost inquiry by

- Mail to service@holzmann-maschinen.at.
- Or use the online complaint order formula provided on our homepage – category service.



27 PRODUKTBEOBACHTUNG | PRODUCT MONITORING

(DE) Wir beobachten unsere Produkte auch nach der Auslieferung.

Um einen ständigen Verbesserungsprozess gewährleisten zu können, sind wir von Ihnen und Ihren Eindrücken beim Umgang mit unseren Produkten abhängig:

- Probleme, die beim Gebrauch des Produktes auftreten
- Fehlfunktionen, die in bestimmten Betriebssituationen auftreten
- Erfahrungen, die für andere Benutzer wichtig sein können

Wir bitten Sie, derartige Beobachtungen zu notieren und an diese per E-Mail oder Post an uns zu senden:

(EN) We monitor the quality of our delivered products in the frame of a Quality Management policy.

Your opinion is essential for further product development and product choice. Please let us know about your:

- Impressions and suggestions for improvement.
- Experiences that may be useful for other users and for product design
- Experiences with malfunctions that occur in specific operation modes

We would like to ask you to note down your experiences and observations and send them to us via E-mail or by post:

Meine Beobachtungen / My experiences:

Name / Name:

Produkt / Product:

Kaufdatum / Purchase date:

Erworben von / purchased from:

E-Mail/ e-mail:

Vielen Dank für Ihre Mitarbeit! / Thank you for your cooperation!

KONTAKTADRESSE / CONTACT:

HOLZMANN Maschinen GmbH

4170 Haslach, Marktplatz 4 AUSTRIA

Tel : +43 7289 71562 0

info@holzmann-maschinen.at

www.holzmann-maschinen.at