




29.2 Explosionszeichnung / Exploded view / Vue éclatée


Cutter Block Guard and Outfeed Assembly:

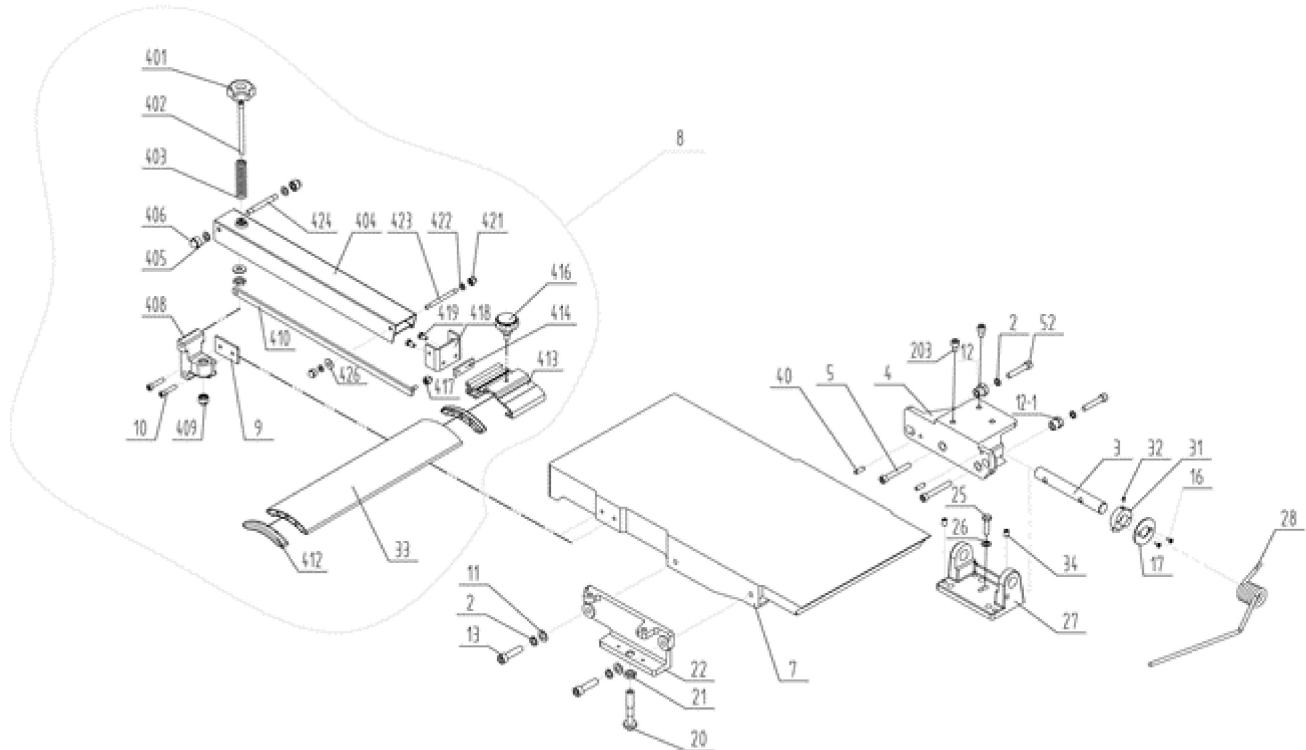

No.	Description	Qty	No.	Description	Qty
2	Spring washer Ø10	2	40	Pin 6X20	4
3	Outfeed Table Bracket Shaft	1	52	Hex. Socket Screw M8X45	2
4	Outfeed Table Bracket Right	1	203	Hex. Socket Screw M8X10	2
5	Hex. Socket Cap Screw M8X60	2	401	Lock Knob	1
7	Outfeed Table	1	402	Lead Screw	1
8	Cutterblock Guard Assembly	1	403	Spring	1
9	Plate	1	404	Bracket for Guard	1
10	Hex. Socket Cap Screw M6X30	2	405	Washer Ø8	3
11	Washer Ø10	2	406	Lock Nut M8	2
12	Hex. bush	1	408	Locking Support	1
12-1	Hex. bush	1	409	Hex. Lock Nut M8	1
13	Hex. Socket Cap Screw M10X40	2	410	Long Shaft	1
16	Screw M4X10	2	412	Fixed Press Paw	2
17	Large washer	1	413	Guard Plate Cover	1
20	Table Locking Shaft	1	414	Lock Plate	1
21	Hex. Nut M12	1	416	Nylon knob	1
22	Outfeed Table Bracket Left	1	417	Lock Nut M6	1
25	Hex. Bolt M8X30	3	418	Bracket	1
26	Washer Ø10	5	419	Hex. Bolt M6X10	2
27	Outfeed Table Support	1	421	Lock Nut M6	2
28	Spring	1	422	Nylon Washer 6	2
31	Big Cam Wheel for Safty Switch	1	423	Shaft (M6)	1
32	Hex. Socket Set Screw M6X6	1	424	Shaft (M8)	1
33	Cutterblock Guard Profile W/Cap	1	426	Washer Ø6	2
34	Hex. Socket Set Screw M8X12	5			




Cutter Block Assembly:

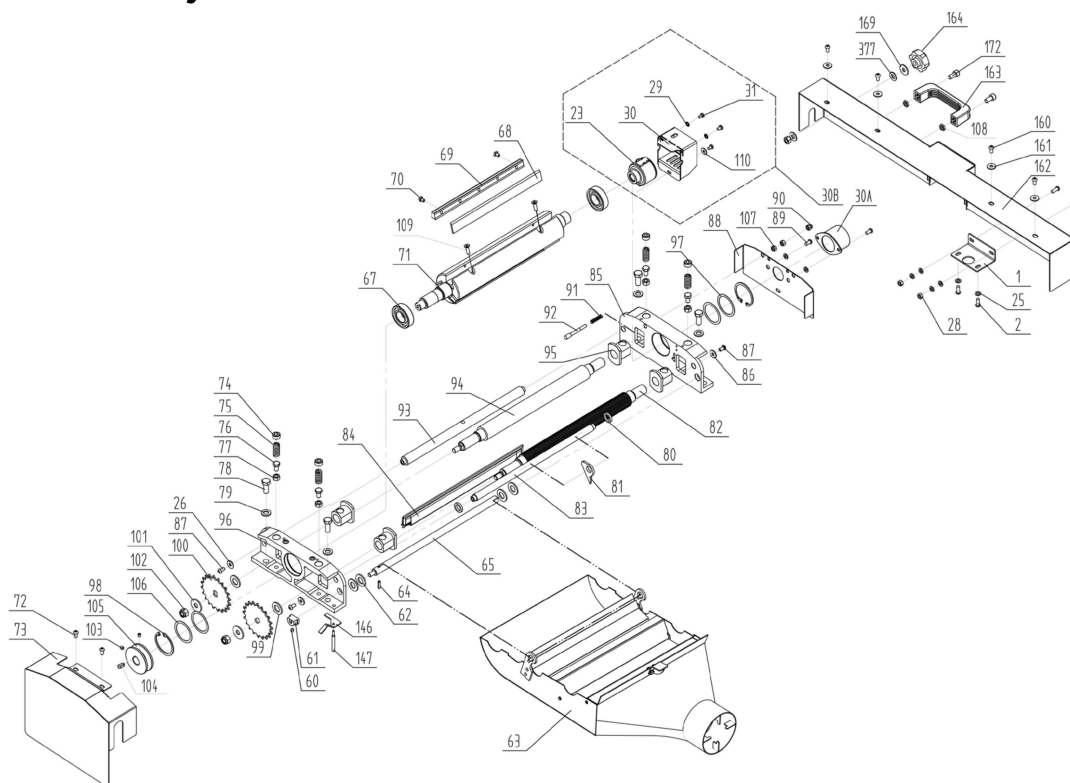

No.	Description	Qty	No.	Description	Qty
1	Cover link plate	1	86	Large Washer Ø6	2
2	Pan Head Screw M6X16	4	87	Hex. Socket Cap Screw M6X12	2
23	Mortising head	1	88	Cutterblock Bracket Cover	1
25	Washer Ø6	6	89	Pan Head Screw M6X12	2
26	Large Washer Ø6	2	90	Cap Nut M6	1
28	Hex. Nut M6	2	91	Spring	1
29	Retained washer Ø5	2	92	Pin Stop for Dust Collector	1
30	Cover of mortising head	1	93	Support Rod	1
31	Pan head screw M5X8	3	94	Outfeed Roller (Rubber)	1
30A	Cover of cutterblock head	1	95	Tube (Powder Metal Bushing)	4
60	Hex. Socket Set Screw M6X6	1	96	Cutterblock Bracket-Right	1
61	Small cam wheel	1	97	Wave Washer D52	2
62	Washer Ø14	4	98	Retaining Ring CLP52	2
63	Dust Collector Assembly	1	99	Washer(black) Ø14	2
64	Pin Roll 5X18	1	100	Drive Chain Sprocket	2
65	Shaft	1	101	Large Washer Ø10	2
67	Bearing 6205-2Z	2	102	Lock Nut M10	2
68	Knife	3	103	Hex. Socket Set Screw M6X6	2
69	Knife Locking Bar	3	104	Key 6X16	2
70	Special Screw for Locking Bar	15	105	Spindle Pulley	1
71	Cutter Block	1	106	Washer D52	2
72	Pan Head Screw M6X12	2	107	Hex. Nut M6	2
73	Belt Cover	1	108	Hex. Thin Nut M8	2
74	Screw	4	109	Hex. Socket Pan Screw M6X20	6
75	Spring	4	110	Large Washer Ø5	1
76	Hex. Bolt M8X14	4	146	Safety Switch Rocker	1
77	Hex. Thin Nut M8	4	147	Safety Switch Rocker Shaft	1
78	Hex. Bolt M10X25	4	160	Pan Head Screw M6X12	4
79	Ø10	4	161	Large washer Ø6	4
80	Space Washer	48	162	Front Cover	1
81	Anti-Kickback Finger	38	163	Handle	1
82	Infeed Roller	1	164	Lock knob	1
83	Anti-Kickback Shaft	1	169	Large Washer Ø8	1
84	Cutterblock Cover	1	172	Hex. Socket screw M8X16	2
85	Cutterblock Bracket-Left	1	377	Nylon Washer Ø8	2




Base Assembly:

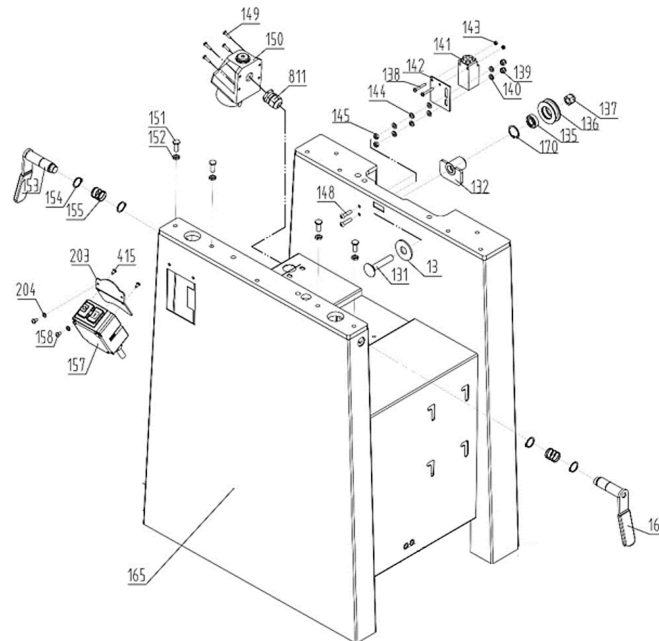

No.	Description	Qty	No.	Description	Qty
13	Large Washer	1	149	Pan Head Screw M4X16	4
131	Carriage Bolt M12X65	1	150	Plug 230/50/1 (400/50/3)	1
132	Tube	1	151	Special Bolt	4
135	Bearing 6001-2Z	1	152	Hex. Thin Nut M8	4
136	Chain Tension Wheel	1	153	Lock Handle For Outfeed Table	1
137	Lock Nut M12	1	154	Retaining Ring CLP20	4
138	Pan Head Screw M4X30	2	155	Spring	2
139	Lock Nut M6	2	157	Switch 230/50/1 (400/50/3)	1
140	Washer Ø6	2	158	Pan Screw M5X8	2
141	Safety Switch	1	165	Cabinet	1
142	Safety Switch Bracket	1	166	Lock Handle For Infeed Table	1
143	Hex. Nut M4	2	170	Retaining Ring CLP28	1
144	Washer Ø6	6	203	Switch plate	1
145	Hex. Nut M6	2	204	Washer Ø5	2
148	Hex. Socket Cap Screw M6X25	2	415	Pan Screw M4X10	2


Infeed Table Assembly:

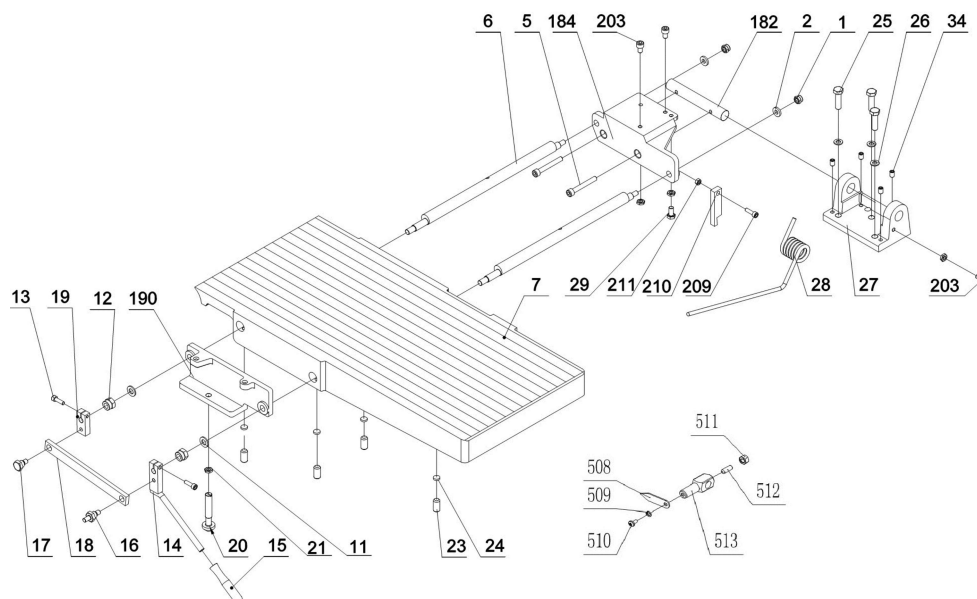



No.	Description	Qty	No.	Description	Qty
1	Lock Nut M8	2	26	Washer Ø8	3
2	Thick Washer	2	27	Table Support	1
5	Hex. Socket Cap Screw M8X60	2	28	Spring	1
6	Eccentric shaft	2	29	Socket Cap Screw M8X16	1
7	Front Table	1	34	Socket Set Screw M8X12	5
11	Washer Ø12	2	182	Outfeed Table Bracket Shaft	1
12	Hex. Lock Nut M12	2	184	Infeed Table Bracket Right	1
13	Socket Cap Screw M6X20	2	190	Infeed Table Bracket Left	1
14	Adjusting handle	1	203	Hex. Socket Cap Screw M8X10	2
15	Knob	1	209	Hex. Socket Cap Screw M8X35	1
16	Bracket Screw	1	210	Table Stopper	1
17	Bracket Screw	1	211	Hex.Thin Nut M8	1
18	Eccentric Shaft Bracket	1	508	Pointer	1
19	Eccentric Shaft Clamp	1	509	Spring washer H4	1
20	Table Locking shaft	1	510	Screw M4X8	1
21	Hex. Thin Nut M12	1	511	Hex. Nut M6	1
23	Socket Set Screw M8X10	4	512	Set Screw M6X16	1
24	Cap	4	513	Support pole	1
25	Hex.Bolt M8X30	3			

Drive and Motor Assembly:

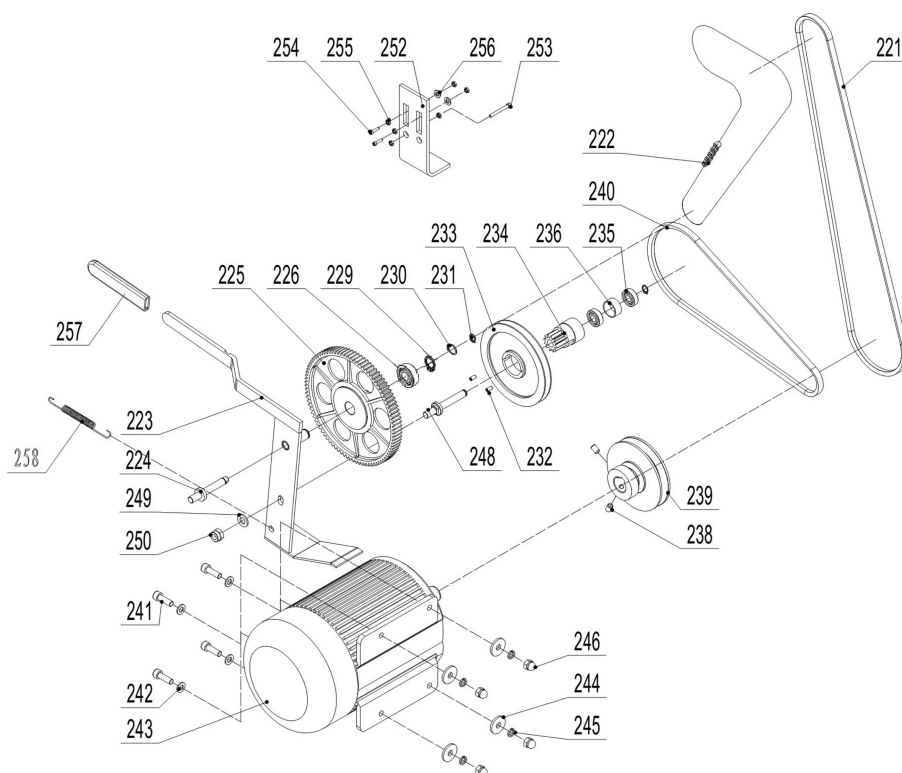


No.	Description	Qty	No.	Description	Qty
221	V-Belt for Cutterblock A1194	1	240	V-Belt for Feed Roller O-770E	1
222	Drive Chain 081-86	1	241	Hex. Bolt M8X25	4
223	Cam Wheel Bracket	1	243	Motor 230/50/1 (400/50/3)	1
224	Cam Wheel Shaft	1	244	Large Washer Ø8	4
225	Plastic Gear Wheel Assembly	1	245	Spring Washer Ø8	4



226	Bearing 61902	2	246	Cap Hex. Nut M8	4
229	Retaining Ring Ø28	2	248	Shaft	1
230	Retaining Ring CLP15	1	249	Washer Ø10	1
231	Retaining Ring CLP10	2	250	Hex. Lock Nut M10	1
232	Hex. Socket Set Screw M5X10	2	252	Plate	1
233	V-Belt Pulley for Feed Roller	1	253	Hex Bolt M6x60	1
234	Gear Wheel	1	254	Socket Cap Screw M6x20	2
235	Bearing 6000-2Z	2	255	Hex Nut M6	6
236	Spacer Bearing	1	257	Rubber Handle	1
238	Hex. Socket Set Screw M6X12	2	258	Tension Spring	1
239	Motor Pulley	1			

Thickness Table Assembly:

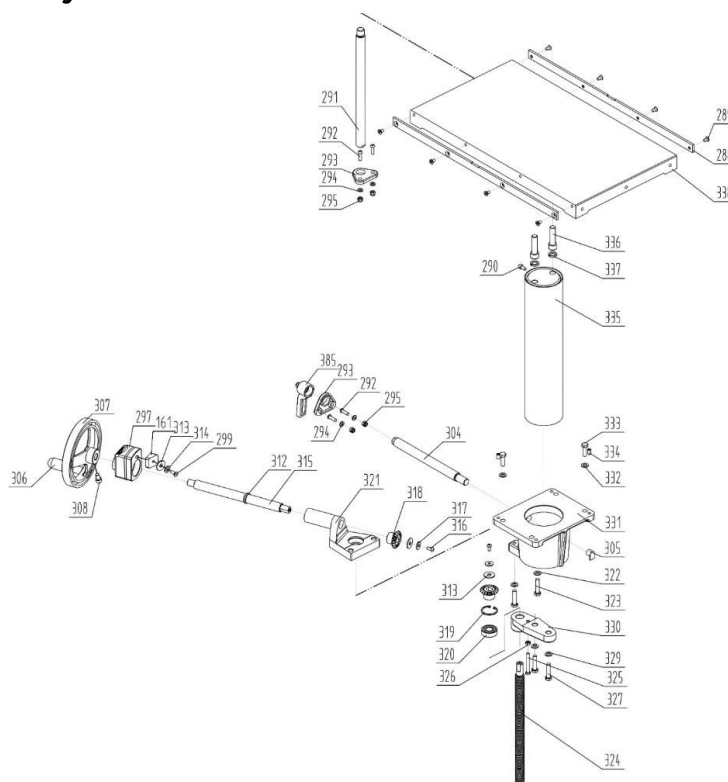


No.	Description	Qty	No.	Description	Qty
161	Indicator Seat	1	318	Bevel Gear	2
288	Long Bar	2	319	Retaining Ring Clp35	2
289	Screw M6x10	8	320	Bearing 6202-2Z	2
290	Hex. Socket Set Screw M6x12	1	321	Bevel Gear Bracket	1
291	Thickness Table Guide Bar	1	322	Washer Ø8	2
292	Hex. Socket Cap Screw M6x20	4	323	Hex. Bolt M8x35	2
293	Guide Bar Bracket	2	324	Thread Rod	1
294	Washer Ø6	4	325	Hex. Bolt M6x50	1
295	Hex. Lock Nut M6	4	326	Hex. Nut M6	1
297	Position Indicator	1	327	Hex. Bolt M8x35	2
299	Screw M6x16	1	329	Washer Ø8	2
304	Locking Bar	1	330	Thread Rob Bracket	1
305	Locking Shoe	1	331	Column Support	1



307	Crank Handwheel 160	1	332	Washer Ø8	4
308	Hex. Socket Cap Screw M8x16	1	333	Hex.bolt M8X25	4
312	Retaining Ring Clp20	1	334	Hex. Socket Set Screw M8x12	4
313	Large Washer Ø8	2	335	Column	1
314	Washer Ø6	2	336	Hex. Socket Screw M12X45	2
315	Crank Bar	1	337	Spring Washer Ø12	2
316	Pan Head Screw M6x12	2	338	Thickness Table	1
317	Large Washer Ø6	2	385	Lock handle	1

Planer Fence Assembly:

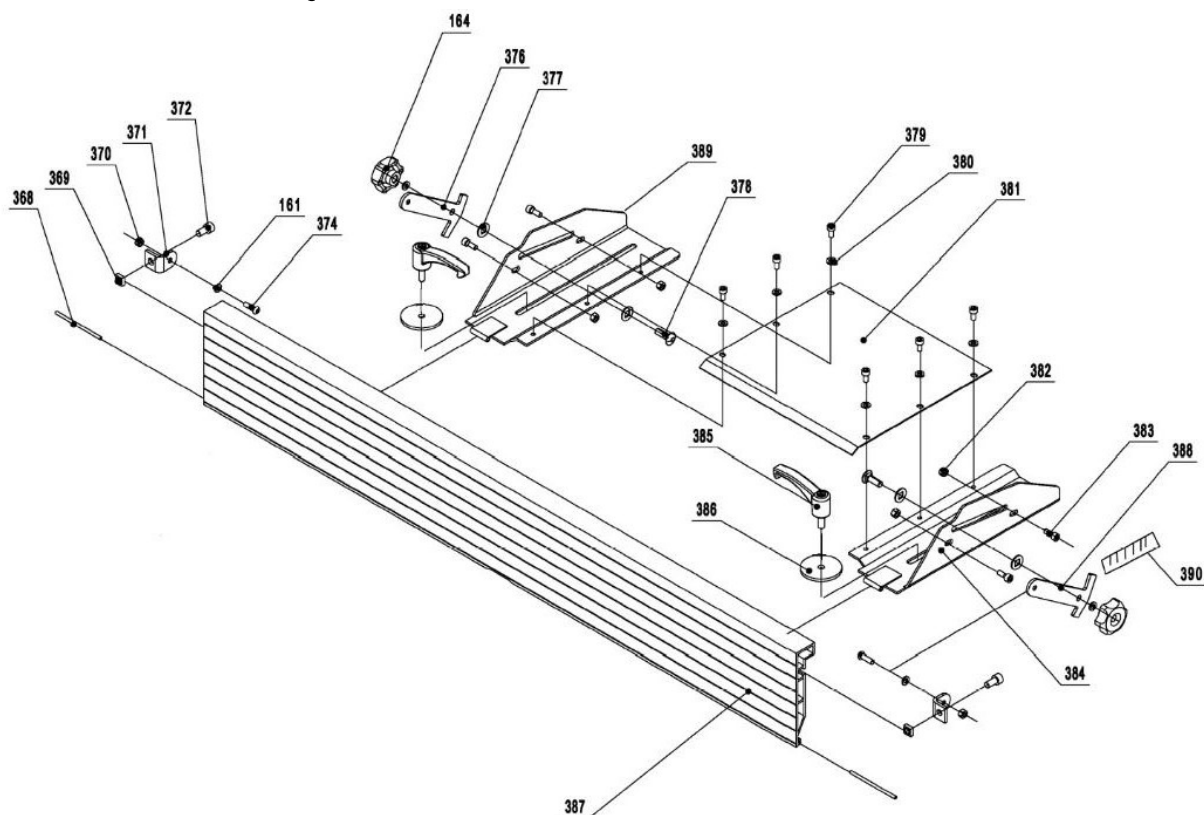

No.	Description	Qty	No.	Description	Qty
161	Large Washer Ø6	2	380	Washer Ø6	6
164	Lock knob	2	381	Cutterblock Cover	1
368	Pin for Hinge	2	382	Hex.Nut M6	4
369	Square Nut M8	2	383	Hex. Socket Cap Screw M6X10	4
370	Nut M6	2	384	Fence Bracket-Left	1
371	Fence Mounting Bracket	2	385	Lock Handle	2
372	Hex. Socket Screw M8X16	2	386	Special Washer	2
374	Hex. Socket Cap Screw M6X16	2	387	Fence	1
376	Fence Support-Right	1	388	Fence Support-Left	1
377	Nylon Washer	4	389	Fence Bracket-Right	1
378	Carriage Bolt M8X25	2	390	Fence Scale	1
379	Pan Head Sscrew M6X12	6			



32 GARANTIEERKLÄRUNG (DE)

1.) Gewährleistung

HOLZMANN MASCHINEN GmbH gewährt für elektrische und mechanische Bauteile eine Gewährleistungsfrist von 2 Jahren für den nicht gewerblichen Einsatz;

bei gewerblichem Einsatz besteht eine Gewährleistung von 1 Jahr, beginnend ab dem Erwerb des Endverbrauchers/Käufers. HOLZMANN MASCHINEN GmbH weist ausdrücklich darauf hin, dass nicht alle Artikel des Sortiments für den gewerblichen Einsatz bestimmt sind. Treten innerhalb der oben genannten Fristen/Mängel auf, welche nicht auf im Punkt „Bestimmungen“ angeführten Ausschlussdetails beruhen, so wird HOLZMANN MASCHINEN GmbH nach eigenem Ermessen das Gerät reparieren oder ersetzen.

2.) Meldung

Der Händler meldet schriftlich den aufgetretenen Mangel am Gerät an HOLZMANN MASCHINEN GmbH. Bei berechtigtem Gewährleistungsanspruch wird das Gerät beim Händler von HOLZMANN MASCHINEN GmbH abgeholt oder vom Händler an HOLZMANN MASCHINEN GmbH gesandt. Retoursendungen ohne vorheriger Abstimmung mit HOLZMANN MASCHINEN GmbH werden nicht akzeptiert und können nicht angenommen werden. Jede Retoursendung muss mit einer von HOLZMANN MASCHINEN GmbH übermittelten RMA-Nummer versehen werden, da ansonsten eine Warenannahme und Reklamations- und Retourbearbeitung durch HOLZMANN MASCHINEN GmbH nicht möglich ist.

3.) Bestimmungen

- a) Gewährleistungsansprüche werden nur akzeptiert, wenn zusammen mit dem Gerät eine Kopie der Originalrechnung oder des Kassenbeleges vom Holzmann Handelspartner beigelegt ist. Es erlischt der Anspruch auf Gewährleistung, wenn das Gerät nicht komplett mit allen Zubehörteilen zur Abholung gemeldet wird.
- b) Die Gewährleistung schließt eine kostenlose Überprüfung, Wartung, Inspektion oder Servicearbeiten am Gerät aus. Defekte aufgrund einer unsachgemäßen Benutzung durch den Endanwender oder dessen Händler werden ebenfalls nicht als Gewährleistungsanspruch akzeptiert.
- c) Ausgeschlossen sind Defekte an Verschleißteilen wie z. B. Kohlebürsten, Fangsäcke, Messer, Walzen, Schneideplatten, Schneideeinrichtungen, Führungen, Kupplungen, Dichtungen, Laufräder, Sageblätter, Hydrauliköle, Ölfiltern, Gleitbacken, Schalter, Riemen, usw.
- d) Ausgeschlossen sind Schäden an den Geräten, welche durch unsachgemäße Verwendung, durch Fehlgebrauch des Gerätes (nicht seinem normalen Verwendungszweckes entsprechend) oder durch Nichtbeachtung der Betriebs- und Wartungsanleitungen, oder höhere Gewalt, durch unsachgemäße Reparaturen oder technische Änderungen durch nicht autorisierte Werkstätten oder den Geschäftspartnern selbst, durch die Verwendung von nicht originalen HOLZMANN Ersatz- oder Zubehörteilen, verursacht sind.
- e) Entstandene Kosten (Frachtkosten) und Aufwendungen (Prüfkosten) bei nichtberechtigten Gewährleistungsansprüchen werden nach Überprüfung unseres Fachpersonals dem Geschäftspartnern oder Händler in Rechnung gestellt.
- f) Geräte außerhalb der Gewährleistungsfrist: Reparatur erfolgt nur nach Vorkasse oder Händlerrechnung gemäß des Kostenvoranschlages (inklusive Frachtkosten) der HOLZMANN MASCHINEN GmbH.
- g) Gewährleistungsansprüche werden nur für den Geschäftspartnern eines HOLZMANN Händlers, welcher das Gerät direkt bei der HOLZMANN MASCHINEN GmbH erworben hat, gewährt. Diese Ansprüche sind bei mehrfacher Veräußerung des Gerätes nicht übertragbar

4.) Schadensersatzansprüche und sonstige Haftungen

Die HOLZMANN MASCHINEN GmbH haftet in allen Fällen nur beschränkt auf den Warenwert des Gerätes. Schadensersatzansprüche aufgrund schlechter Leistung, Mängel, sowie Folgeschäden oder Verdienstaufälle wegen eines Defektes während der Gewährleistungsfrist werden nicht anerkannt. HOLZMANN MASCHINEN GmbH besteht auf das gesetzliche Nachbesserungsrecht eines Gerätes.

SERVICE

Nach Ablauf der Garantiezeit können Instandsetzungs- und Reparaturarbeiten von entsprechend geeigneten Fachfirmen durchgeführt werden. Es steht Ihnen auch die HOLZMANN MASCHINEN GmbH weiterhin gerne mit Service und Reparatur zur Seite. Stellen Sie in diesem Fall eine unverbindliche Kostenanfrage

- per Mail an service@holzmann-maschinen.at.
- oder nutzen Sie das Online Reklamations- bzw. Ersatzteilbestellformular, zur Verfügung gestellt auf unserer Homepage – Kategorie SERVICE.