


20.2 Explosionszeichnung / explosion drawing / Vue éclatée

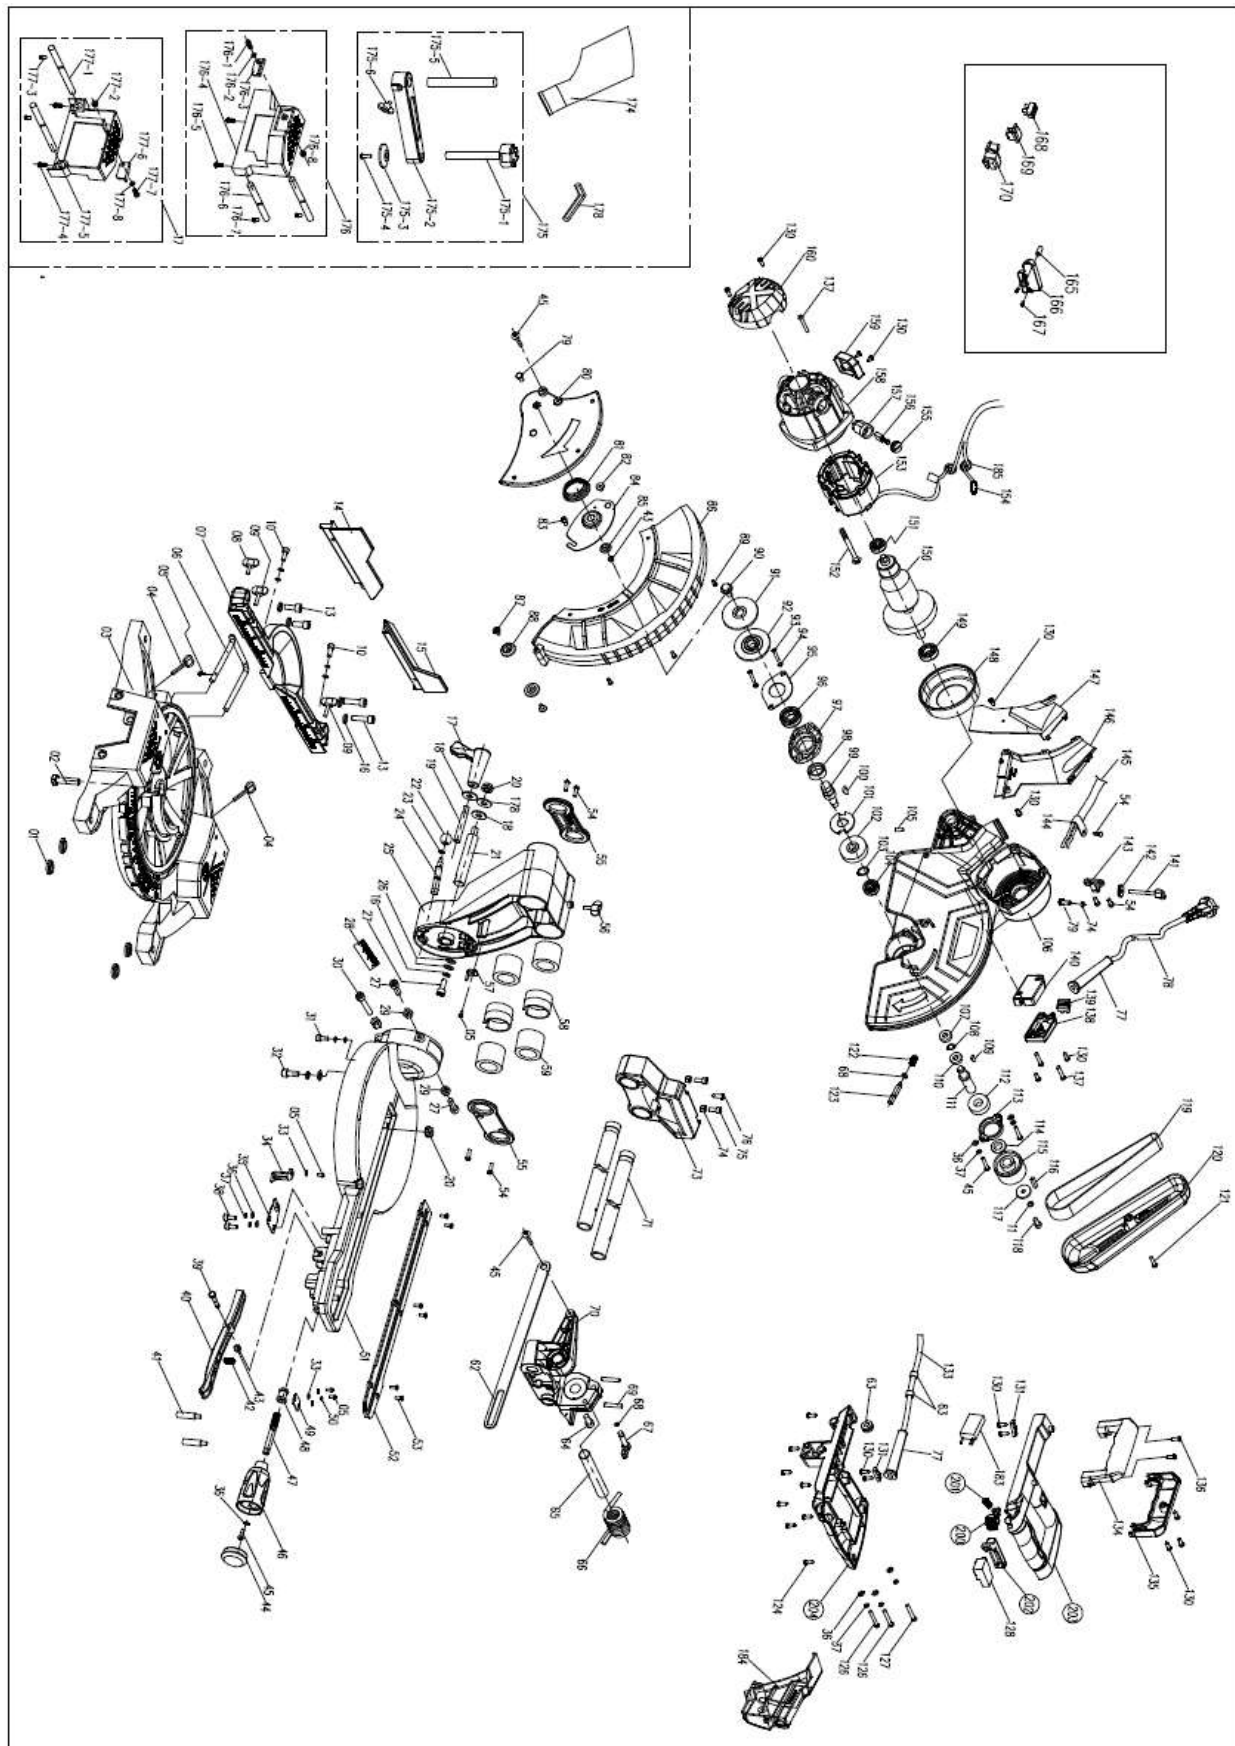

#		Qty	#		Qty	#		Qty	#		Qty
1	Foundation washer	4	51	Disc	1	102	Large gear	1	155	Brush holder cover	2
2	M10*40 outer hexagon screw	1	52	Table insert	1	103	16 circlip for shafts	1	156	Carbon brush	2
3	Base	1	53	M4*10 grub screw	6	104	6000 bearing	1	157	Brush holder	2
4	M6*40 butterfly screw	2	54	M5*10 cross recessed pan head screw	7	105	M6x10 stud screw	1	158	Machine enclosure	1
5	M4*10 spherical phillip's screw	5	55	End cover	2	106	Head shell	1	159	Wire pressing box	1
6	1028 Rear support frame	1	56	M6*25 butterfly screw	1	107	699 bearing	1	160	Rear shade	1
7	Back frame	1	57	Chamfering pointer	1	108	12 circlip	1	183	0.22uf Capacitance	1
8	M6*8 butterfly screw	1	58	Distance sleeve of linear bearing	2	109	4*13 woodruff key	1	184	Line-through shield plate	1
9	M6*30 butterfly screw	2	59	Linear bearing	4	110	Small gear	1	185	Magnet ring	2
10	M6*20 socket head cap screw	2	60	φ7*φ17*1 plain washer	2	111	Intermediate shaft	1	165	Laser switch	1
11	6 spring washer	4	61	φ10*φ5.5*4 steel bushing	2	112	6202 bearing	1	166	The laser box	1
12	6 flat washer	3	62	Connecting rod	1	113	Bearing gland	1	167	M4x10Cross pan head screw	2
13	M8*20 socket head cap screw	4	63	Jacket	2	114	φ15*φ22*2 epoxy gasket	1	168	Transparent cover coat	1
14	Left movable back frame	1	64	M8*30 socket head cap screw	1	115	Belt pulley	1	169	Line bank	1
15	Right movable back frame	1	65	Connection axis	1	116	5*20 square key	1	170	Laser switch	1
16	8 spring washer	6	66	Big torsional spring	1	117	φ6*φ25*3 plain washer	1	171	Transparent cover coat	1
17	Angular locking handle	1	67	105A self-locking pin toggle button	1	118	M6*20 left hand socket head cap screw	1	174	Dust bag parts	1
18	φ10*φ25*2 gasket	2	68	6 circlip for shafts	1	119	Belt	1	175	Clamping block parts	1
19	Angular clamp axis	1	69	6*40 spring pin	2	120	Belt cover	1	175-1	Hand wheel	1
20	M10 lock nut	2	70	Support	1	121	M5*20 cross recessed pan head screw	1	175-2	Clamping block	1
21	Locking axis	1	71	Tension rod	2	122	Since the spring lock	1	175-3	Jaw iron	1
22	1240 ball nut	1	73	Tension rod handle	1	123	8 * 53 slot locking pin	1	175-4	6 lathes M5*7 pan head screw	1
23	O-shaped ring (9*2)	1	74	M6 nut	2	124	ST3.9*16 cross recessed pan head tapping screw	8	175-5	Fixed rod	1
24	Right-angle dowel pin	1	75	M6*14 socket head cap screw	2	126	M5*35 cross recessed pan head screw	2	175-6	M6*15 butterfly screw	1
25	Connecting base	1	76	5*16 slotted self tapping screw	1	127	M5*45 cross recessed pan head screw	1	175-7	The clamping block	1
26	8 flat washer	3	77	Cable jacket	2	128	Switch	1	175-8	The clamping piece of spring	1
27	M8*25 socket head cap screw	3	78	Cable	1	130	ST3.9*14 cross recessed pan head tapping screw	15	176	Left shelter part	1
28	Scale plate of connecting base	1	79	M6*12 outer hexagon screw	2	131	Tension disc	2	176-1	M5*14 Phillips big head screw	1
29	M8 nut	3	80	Transparent cover	1	133	Junction line	1	176-2	5 spring washer	1
30	M8*50 socket head cap screw	1	81	Big spring of transparent cover	1	134	Left lifting handle	1	176-3	Left shelter movable plate 1	1
31	M6*25 socket head cap screw	1	82	10 lathes M6*7 big flat head SHCS	1	135	Right lifting handle	1	176-4	Left shelter 1	1
32	M8*25 socket head cap screw	1	83	M6*10 cross recessed pan head screw	1	136	ST3.9*20 cross recessed pan head tapping screw	2	176-5	M5*12 Phillips big head screw 2	2
33	4 flat washer	4	84	Big cover sheet of transparent cover	1	137	M5*25 pherical phillip's screw	6	176-6	Extension rod 2	2
34	Pointer	1	85	Fixed sleeve	1	138	Junction box lid	1	176-7	M4*10 spherical Phillips screw 2	2
35	Limit rod	1	86	Transparent cover	1	139	Line bank	1	176-8	M5 lock nut 1	1
36	5 flat washer	12	87	4*15 Tapping screw with gasket	2	140	Junction box	1	177	Right shelter part 1	1
37	5 spring washer	11	88	Pulley	2	141	M6*50 butterfly screw	1	177-1	Extension rod 2	2
38	M5*14 socket head cap screw	2	89	M4*14 pherical phillip's screw	3	142	M6 knurled thumb nut (thin type)	1	177-2	M5 lock nut 1	1
39	M6*35 outer hexagon screw	1	90A	M8 * 20 Allen cushioned against tooth (8.8)	1	143	Depth limit frame	1	177-3	M4*10 spherical Phillips screw 2	2
40	Fixed rod	1	91	External compressive plate	1	144	Strain relief bushing	1	177-4	M5*12 Phillips big head screw	2
41	Support rod	2	92	Internal compressive plate	1	145	Junction line	1	177-5	Right shelter	1
42	Spring	1	93	M5*25 grub screw	2	146	Right dust discharge cover	1	177-6	Right shelter movable plate	1
43	M6 lock nut	2	94	5 bowel-shaped washer	2	147	Left dust discharge cover	1	177-7	M5*14 Phillips big head screw	1
44	Side handle cap	1	95	Gland	1	148	Fan shroud	1	177-8	5 spring washer	1
45	M5*16 cross recessed pan head screw	5	96	6003 bearing	1	149	6002 bearing	1	178	Allen key 6 x 120	1
46	Side handle	1	97	Front cover	1	150	Rotor	1	200	Since the lock button switch	1
47	Locking rod	1	98	Oil seal	1	151	6200 bearing	1	201	Button in the spring	1
48	M10*20 center slotted nut	1	99	Output shaft	1	152	ST4.8*70 cross recessed pan head tapping screw	2	202	Switch button	1
49	Lock washer	1	100	5*16 woodruff key	1	153	Stator	1	203	Upper handle	1
50	4 spring washer	2	101	Self-locking plate	1	154	Tension spring	2	204	Lower handle	1

22 GARANTIEERKLÄRUNG (DE)

1.) Gewährleistung:

HOLZMANN gewährt für elektrische und mechanische Bauteile eine Gewährleistungsfrist von 2 Jahren für den nicht gewerblichen Einsatz;

bei gewerblichem Einsatz besteht eine Gewährleistung von 1 Jahr, beginnend ab dem Erwerb des Endverbrauchers/Käufers. HOLZMANN weist ausdrücklich darauf hin, dass nicht alle Artikel des Sortiments für den gewerblichen Einsatz bestimmt sind. Treten innerhalb der oben genannten Fristen/Mängel auf, welche nicht auf im Punkt „Bestimmungen“ angeführten Ausschlussdetails beruhen, so wird HOLZMANN nach eigenem Ermessen das Gerät reparieren oder ersetzen.

2.) Meldung:

Der Händler meldet schriftlich den aufgetretenen Mangel am Gerät an HOLZMANN. Bei berechtigtem Gewährleistungsanspruch wird das Gerät beim Händler von HOLZMANN abgeholt oder vom Händler an HOLZMANN gesandt. Retoursendungen ohne vorheriger Abstimmung mit HOLZMANN werden nicht akzeptiert und können nicht angenommen werden. Jede Retoursendung muss mit einer von HOLZMANN übermittelten RMA-Nummer versehen werden, da ansonsten eine Warenannahme und Reklamations- und Retourenbearbeitung durch HOLZMANN nicht möglich ist.

3.) Bestimmungen:

a) Gewährleistungsansprüche werden nur akzeptiert, wenn zusammen mit dem Gerät eine Kopie der Originalrechnung oder des Kassenbeleges vom Holzmann Handelspartner beigelegt ist. Es erlischt der Anspruch auf Gewährleistung, wenn das Gerät nicht komplett mit allen Zubehörteilen zur Abholung gemeldet wird.

b) Die Gewährleistung schließt eine kostenlose Überprüfung, Wartung, Inspektion oder Servicearbeiten am Gerät aus. Defekte aufgrund einer unsachgemäßen Benutzung durch den Endanwender oder dessen Händler werden ebenfalls nicht

als Gewährleistungsanspruch akzeptiert.

c) Ausgeschlossen sind Defekte an Verschleißteilen wie z. B. Kohlebürsten, Fangsäcke, Messer, Walzen, Schneideplatten, Schneideeinrichtungen, Führungen, Kupplungen, Dichtungen, Laufräder, Sageblätter, Hydrauliköle, Ölfiltern, Gleitbacken, Schalter, Riemen, usw.

d) Ausgeschlossen sind Schäden an den Geräten, welche durch unsachgemäße Verwendung, durch Fehlgebrauch des Gerätes (nicht seinem normalen Verwendungszweckes entsprechend) oder durch Nichtbeachtung der Bedienungs- und Wartungsanleitungen, oder höhere Gewalt, durch unsachgemäße Reparaturen oder technische Änderungen durch nicht autorisierte Werkstätten oder den Geschäftspartnern selbst, durch die Verwendung von nicht originalen HOLZMANN Ersatz- oder Zubehörteilen, verursacht sind.

e) Entstandene Kosten (Frachtkosten) und Aufwendungen (Prüfkosten) bei nichtberechtigten Gewährleistungsansprüchen werden nach Überprüfung unseres Fachpersonals dem Geschäftspartnern oder Händler in Rechnung gestellt.

f) Geräte außerhalb der Gewährleistungsfrist: Reparatur erfolgt nur nach Vorauskasse oder Händlerrechnung gemäß des Kostenvoranschlages (inklusive Frachtkosten) der Fa. HOLZMANN.

g) Gewährleistungsansprüche werden nur für den Geschäftspartnern eines HOLZMANN Händlers, welcher das Gerät direkt bei der Fa. HOLZMANN erworben hat, gewährt. Diese Ansprüche sind bei mehrfacher Veräußerung des Gerätes nicht übertragbar

4.) Schadensersatzansprüche und sonstige Haftungen:

Die Fa. Holzmann haftet in allen Fällen nur beschränkt auf den Warenwert des Gerätes.

Schadensersatzansprüche aufgrund schlechter Leistung, Mängel, sowie Folgeschäden oder Verdienstaufälle wegen eines Defektes während der Gewährleistungsfrist werden nicht anerkannt. Die Fa. Holzmann besteht auf das gesetzliche Nachbesserungsrecht eines Gerätes.

SERVICE

Nach Ablauf der Garantiezeit können Instandsetzungs- und Reparaturarbeiten von entsprechend geeigneten Fachfirmen durchgeführt werden. Es steht Ihnen auch die HOLZMANN-Maschinen GmbH weiterhin gerne mit Service und Reparatur zur Seite. Stellen Sie in diesem Fall eine unverbindliche Kostenanfrage, unter Angabe der Informationen siehe C) an unseren Kundendienst oder senden Sie uns Ihre Anfrage einfach per umseitig beiliegendem Formular ein.

Mail: info@holzmann-maschinen.at

oder Nutzen sie das Online Reklamations.- bzw. Ersatzteilbestellformular zur Verfügung gestellt auf unserer Homepage: www.holzmann-maschinen.at unter der Kategorie Service/News